

# CAADEx

SOLUTIONS OF HONEY

[www.caadexhoney.com](http://www.caadexhoney.com)

## **CAADEx HONEY FILLING TAP USER MANUAL**

Thank you for choosing CAADEx Honey Filling Container and we wish you a lot of joy in using our products.

We have prepared a user manual for honey filling tap to ensure that you can use our honey filling containers as intended.

### Usage:

Before filling honey into CAADEx Honey Filling Container following steps should be taken:


1. Please check that the tap sealing silicone is located in the recess without twisting. The outer part of the sealing silicone is flat and the part that fits into the recess is curved.  
(Picture nr.1-2)

**CAADEx Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.


E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 733-9272

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 703-8950

Picture nr.1

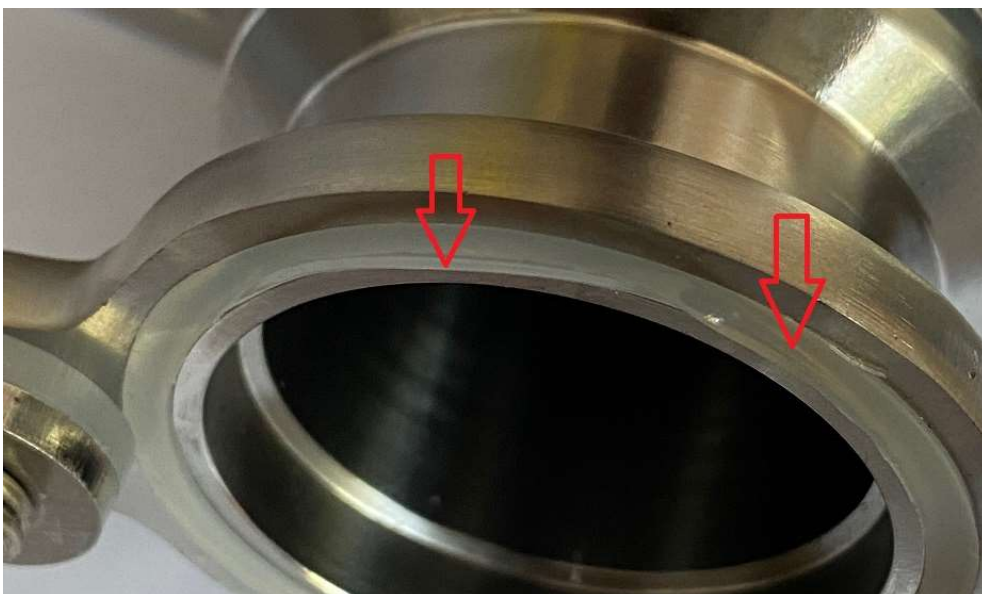


Picture nr.2

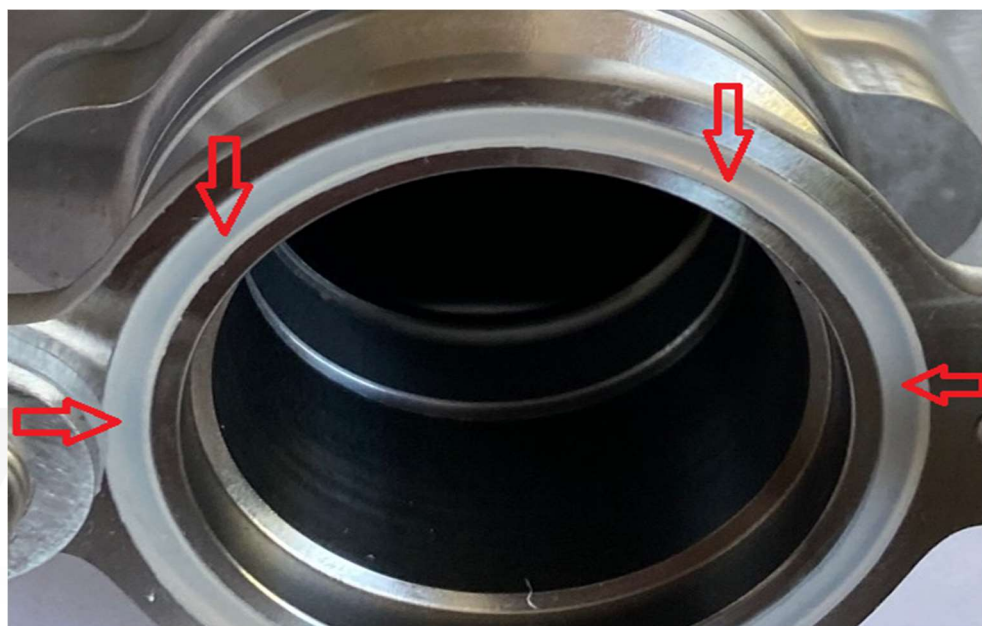

**CAAD EX Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

2. Use a size 10 wrench to loosen the counter mother bolt on the end of the left spring bolt. Use the Allen key to adjust the tension of the pivot shaft (using the left-hand spring-loaded metric screw) so that the guillotine tap cover can be moved easily and the proper locking will be ensured. After that tighten the counter mother bolt at the end of the screw, which will make the axle tension permanent. So the position of the tap cover will not be adjusted even after repeated opening and closing. (Picture nr.3,4,5)

Picture nr.3

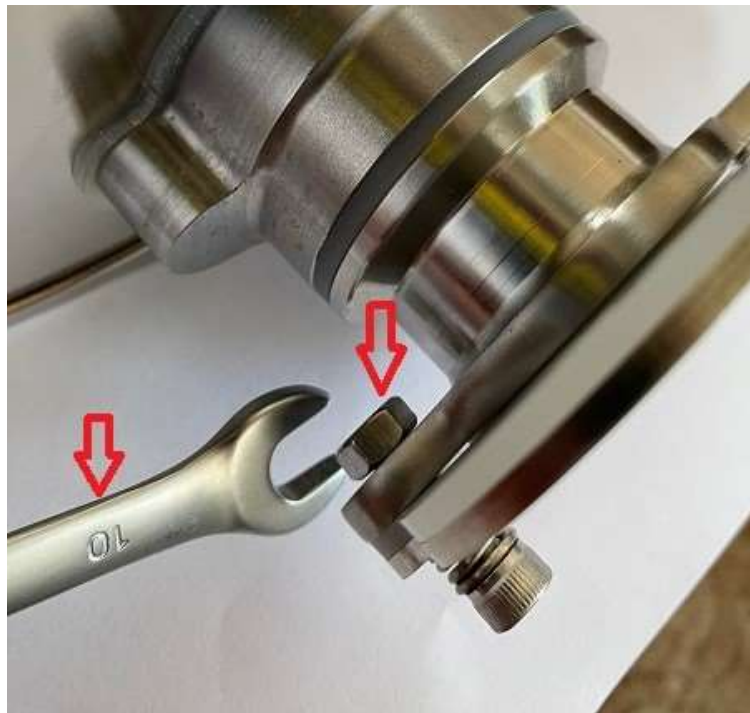

**CAAD EX Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

Picture nr.4



Picture nr.5



**CAAD EX Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 733-9272

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 703-8950

3. The opening limits of the CAAD<sub>EX</sub> honey filling tap should be applied as shown in the picture. Do not open the tap cover further than the vertical position (90°), this will prevent that tap sealing silicone will be drifted out from their position. (Picture nr.6-7)

Picture nr.6



**CAAD<sub>EX</sub> Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

Picture nr.7



4. During the repeated opening and closing of the CAAD EX honey tap cover (during honey tapping), it is necessary to push the tap cover in the direction of the butterfly screw and the container as well, so that the tap cover will be locked under the lower edge of the butterfly screw. This will ensure a drop-free closure. (Picture nr.8-9)

Picture nr.8



Picture nr.9



**CAAD EX Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 733-9272

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 703-8950

5. When honey tapping is finished but the container still contains honey, turn the wing nut on the right side of the CAAD<sub>EX</sub> tap clockwise until the honey tap is fully closed. In this case, the CAAD<sub>EX</sub> container can be used for storing honey. (Picture nr.10)

Picture nr.10



Thank you for your attention and we really do hope that CAADEx honey filling containers will help you to make honey handling processes more simple.

Your sincerely, CAADEx Team

CAADEx

**CAADEx Kft. Szekszárd Engineering and Sales Office**  
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 733-9272

E-mail: [caadexhoney@caadex.hu](mailto:caadexhoney@caadex.hu)  
Mob: 0036/30 703-8950